

User Manual

erazer[®]

MEDION[®]


GAMING KEYBOARD

MD 88112



2

3

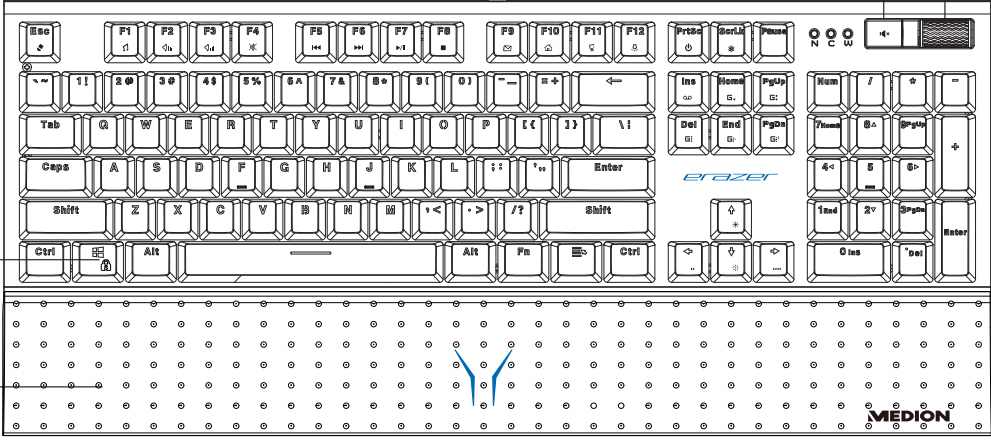

4

5

MEDION

Device parts

- 1 USB connection cable
- 2 Mute
- 3 Volume control
- 4 Windows lock key
- 5 Palm rest

About these operating instructions



Thank you for choosing our product. We hope you enjoy using it.

Read the safety instructions carefully before using the device for the first time. Note the warnings on the device and in the operating instructions.

Always keep the operating instructions close to hand. If you sell the device or give it away, please ensure that you also pass on these operating instructions. They are an essential component of the product.

Explanation of symbols

If a block of text is marked with one of the warning symbols listed below, avoid the hazard described in that text to prevent the potential consequences described there from occurring.



DANGER!

This signal word indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.



WARNING!

This signal word indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.



CAUTION!

This signal word indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

NOTICE!

This signal word warns of possible damage to property.



This symbol gives you useful additional information on assembly or operation.

Safety information

Operational safety



WARNING!

Risk of injury for people with reduced physical, sensory or mental capacity (for example, partially disabled people or older persons with impaired physical and mental capacity) or with a lack of experience and/or knowledge (for example, older children).

- This device may be used by children

aged 8 years and older and by persons with reduced physical, sensory or mental abilities or by those without experience and/or knowledge, if they are supervised or have been instructed in the safe use of the device and have understood the dangers that result from it.

- Children must not be allowed to play with the device.
- This is not a toy.
- This device is not for commercial use.
- Indoor use only.
- Cleaning and maintenance must not be carried out by children.
- Children under 8 years of age should not be allowed near the device and its connection lead.
- Do not store any of the packaging material used (bags, polystyrene, etc.) within the reach of children.

- Do not allow children to play with the packaging.

NOTICE!

There is no right of recourse for lost data or for consequential damages due to loss of data.

This product has been designed for use with a PC.

- Observe the safety regulations of the computer to which you connect the devices.

Set-up location

- Place and operate the device on a stable, level and vibration-free surface.
- Keep the device away from moisture, drips or splashes of water and avoid dust, heat and direct sunlight.

Scope of delivery

Please check your purchase to ensure that all items are included. If anything is missing, please contact us within 14 days of purchase. Make sure to quote the serial number when

making enquiries.

The following items are supplied with your device:

- Keyboard
- Palm Rest
- Documentation



Packaging film can be swallowed or used improperly, creating a risk of suffocation!

- Keep packaging material such as plastic film or plastic bags away from children.

Start-up

- Switch on the computer and all connected peripheral devices (monitor, printer, etc.) and wait until the operating system has started up completely.
- Put the keyboard's USB cable into a free USB port on your computer.
- The palm rest connects to the underside of the keyboard.

Setting the volume

- Turn the volume control **3** to set the desired volume.
- Press the mute control **2** to mute the sound.
- Press the volume control **2** again to unmute the sound.

Software

- ▶ Download the software from http://cdn.medion.com/downloads/software/sw_md88112_w10.exe
- ▶ Install and run the software.

Locking the Windows key

- Press the **FN + Windows Key** key to lock the Windows key.
- Press the **FN + Windows Key** key again to unlock the Win key.

Special functions of the keyboard

Keys	Function
Fn + F1	Switch media player on
Fn + F2	Volume -
Fn + F3	Volume +
Fn + F4	Mute
Fn + F5	Previous track
Fn + F6	Next track
Fn + F7	Start/pause playback
Fn + F8	Stop media player
Fn + F9	Open email
Fn + F10	Standard browser
Fn + F11	Drive overview

Background lighting

Keys	Function
Fn + F12	Change lighting pattern
Fn + PrtSc	Lighting on/off

Keys	Function
Fn + ScrLk	Colour selection
Fn + ↑	Lighten
Fn + ↓	Darken
Fn + ←	Decrease colour change speed
Fn + →	Increase colour change speed

LIGHTING PATTERNS

The following lighting patterns can be selected:

- All keys are lit up
- Pressed key Light up
- Current line of keys
- Sine wave
- Raindrops
- Waves left to right
- Waves spread out from O key
- All keys lit differently
- Rapid colour change of all keys
- Keys will light up red, orange, blue, green, violet and yellow
- Tent
- Individual keys will light up green, cyan, blue, violet, pink, orange and yellow
- Breathing effect

Customising your lighting pattern

- Press **FN + Ins** to access the lighting setting mode.
- Now press the key you want to light up.

- Press **FN + Ins** to save the light setting.

Cleaning

- Make sure that dirt does not get into the device. Remove all cable connections to the PC before cleaning the device. Clean the device and the other components with a dampened cloth. Do not use solvents, corrosive or gaseous cleaning agents.

Disposal



PACKAGING

The product has been packaged to protect it from damage during transport. The packaging is made of materials that can be recycled in an environmentally friendly manner.

DEVICE

Old devices should not be disposed of with the normal household rubbish. If you can no longer use your electrical device, dispose of it in accordance with the legal provisions applicable in your country. This involves separating the materials in the device for the purpose of recycling and minimising the environmental impact. Take old devices to a collection point for electrical scrap or a recycling centre.

Contact your local waste disposal company or your local authority for more information on this subject.

Declaration of conformity



MEDION AG hereby declares that the product MD 88112 conforms to all relevant Australian requirements.

General technical specifications

Operating temperature	5°C - 40°C
Humidity	20% - 85%
Dimensions in mm (W × H × D)	approx. 448.7 × 36.2 x 135.0
Weight incl. wrist rest	approx. 1050 g
Voltage supply	USB DC IN 5V = 400mA

Service information

Please contact our Customer Service team if your device ever stops working the way you want or expect it to. There are several ways you can contact us:

- In our Service Community, you can meet other users, as well as our staff, and you can share your experiences and knowledge. You will find our Service

Community at <http://community.medion.com>.

- Alternatively, use our contact form at www.medion.com/contact.
- You can also contact our Service team via our hotline or by post.

Opening times	Hotline number
Mon – Fri: 08:30AM to 06:00PM EST	☎ 1300 884 987
Service address	
MEDION Australia Pty Ltd. Chatswood, NSW 2067 Australia	



You can download this and many other sets of operating instructions from our service portal at www.medion.com/au/contact.php.

You will also find drivers and other software for a wide range of devices there.

You can also scan the QR code on the side of the screen to download the operating instructions onto your mobile device from the service portal.

Privacy statement

Dear customer,

We wish to inform you that we, MEDION AG, Am Zehnthof 77, 45307 Essen, Germany process your personal data as a data controller.

For matters regarding data protection, we are supported by our company data protection officer who can

be contacted at MEDION AG, Datenschutz, Am Zehnthof 77, D-45307 Essen, Germany; datenschutz@medion.com. We process your data for the purpose of warranty processing and associated services (e.g. repairs) and therefore rely on processing your data for the sales contract concluded with us.

Your data will be provided to repairers contracted to us for the purpose of warranty processing and associated services. We generally store your personal data for a period of three years in order to fulfil your legal warranty rights.

You have the right to be informed of the personal data concerned as well as the right to rectification, deletion, restriction of processing, the right to object to processing, as well as the right to data portability.

In case of access and cancellation rights, restrictions apply according to Sec. 34 and Sec. 35 of the BDSG (Federal Data Protection Act) (Art. 23 GDPR). In addition, there is a right of appeal to a competent data protection supervisory authority (Art. 77 GDPR in conjunction with Sec. 19 BDSG). The state official in Germany responsible for data protection and freedom of information for MEDION AG is the Commissioner for Data Protection and Freedom Of Information for North Rhine Westphalia, PO Box 200444, 40212 Düsseldorf, Germany. www.ldi.nrw.de.

The processing of your data

is necessary for warranty processing; it is not possible to process the warranty without the required data being provided.

Legal notice

Copyright © 2021

Date: 01.09.2021

All rights reserved.

These operating instructions are protected by copyright.

Mechanical, electronic and any other forms of reproduction are prohibited without the written permission of the manufacturer.

Copyright is owned by the company:

MEDION AG
Am Zehnthof 77
45307 Essen
Germany

Please note that you cannot use the address above for returns. Please always contact our Customer Service team first.



Made in China

DISTRIBUTED BY:
ALDI STORES
1 SARGENTS ROAD
MINCHINBURY NSW 2770
www.aldi.com.au

AFTER SALES SUPPORT

707372 



AU

1 300 884 987



australia@medion.com

MODEL:
MD 88112

11/2021

1
YEAR
WARRANTY